


## INSTALLATION METHOD FOR C4/C5 SERVO KIT

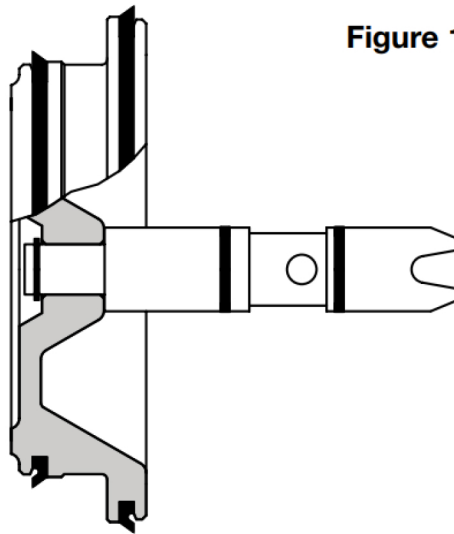

### DISASSEMBLY

1. Remove and discard the OE C4 intermediate servo assembly and any remaining gasket material on the case surface.
2. Install the two lip seals on the piston with the lips facing away from each other and secure it onto the servo pin with the snap ring. (see figure 1)
3. Replace the entire piston assembly with the "C" ratio servo assembly per the standard procedures.



**Figure 1**