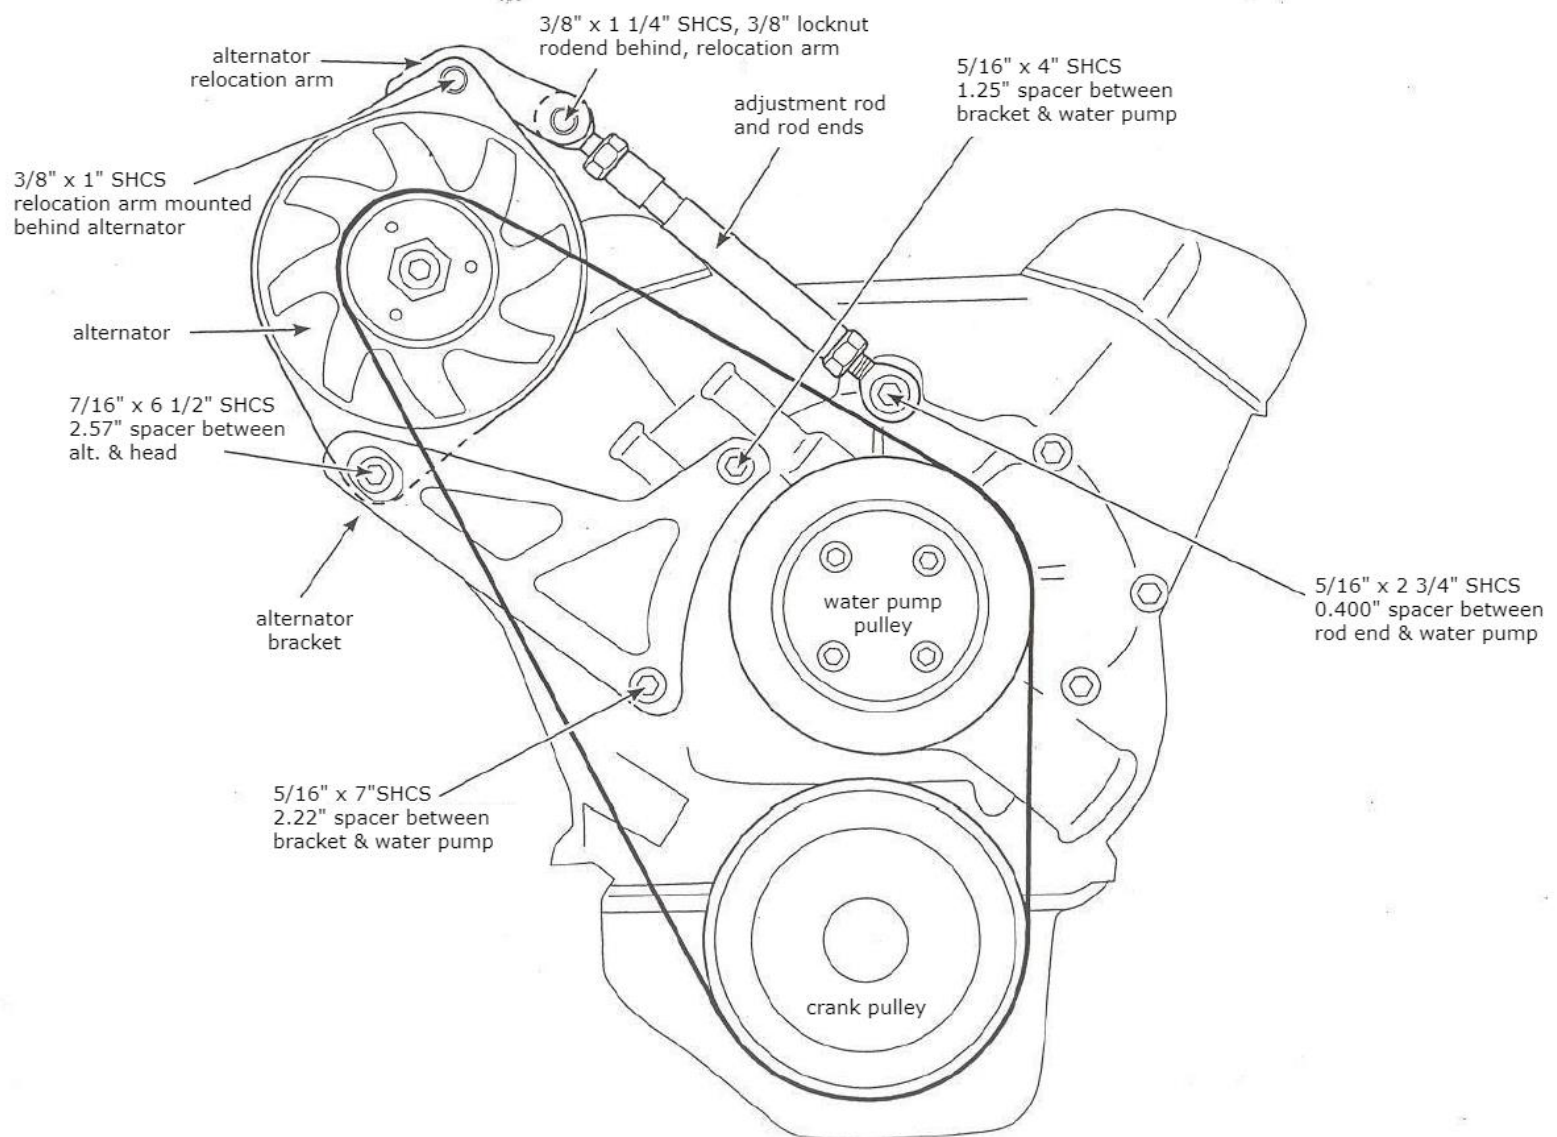


Aluminum Alternator Bracket Kit Small Block Ford 289/302 Windsor

PCE232.1001

INSTALLATION METHOD FOR ALTERNATOR BRACKET





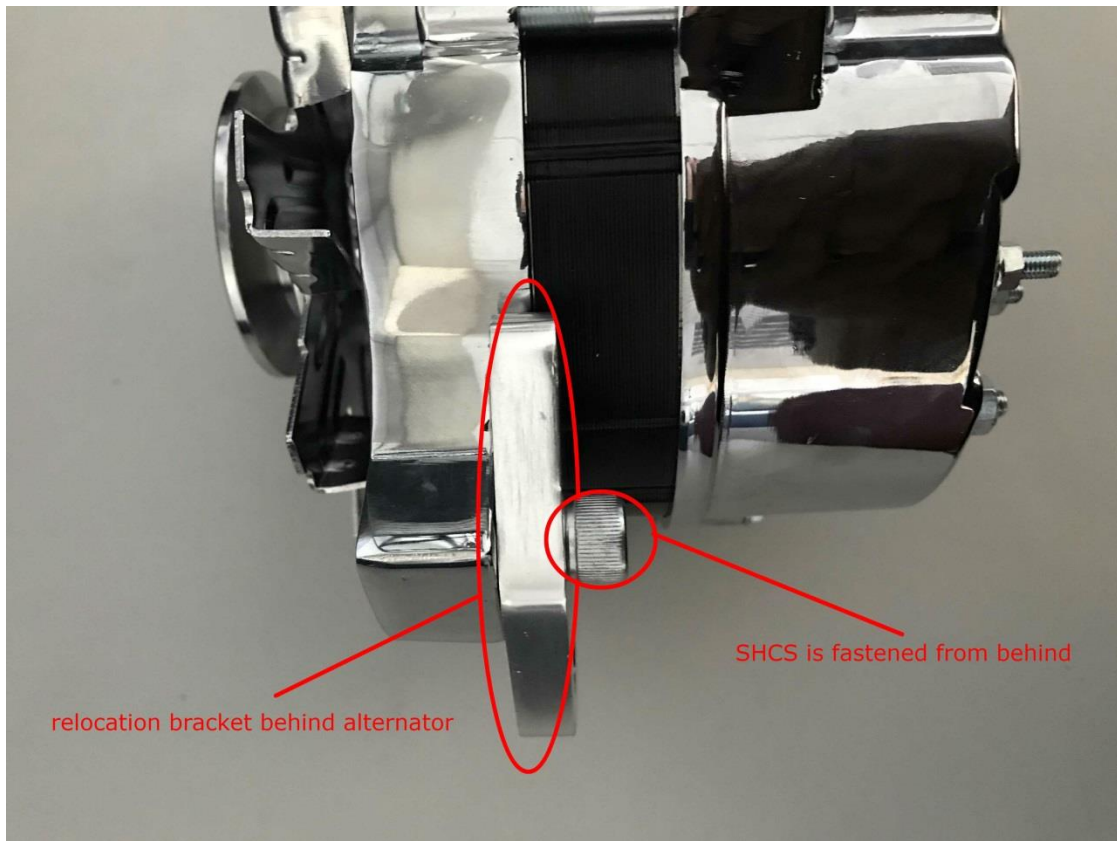


Figure 1: Relocation bracket fastened from behind



Figure 2: SHCS fastened from behind

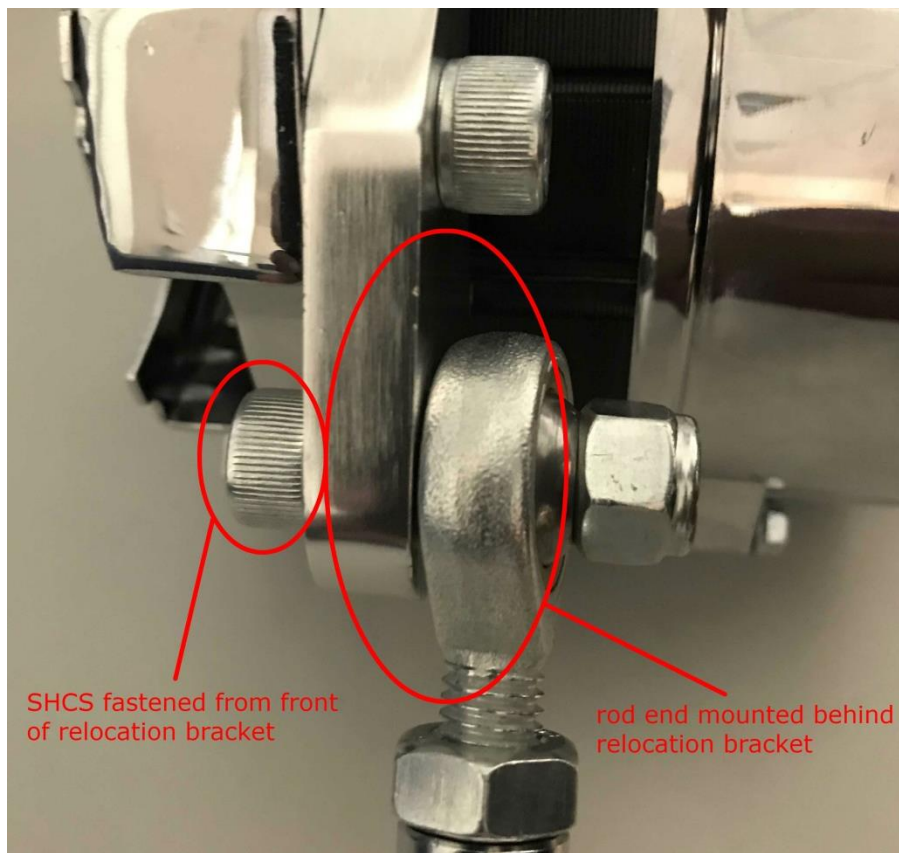


Figure 3: Rod end mounted from behind relocation bracket

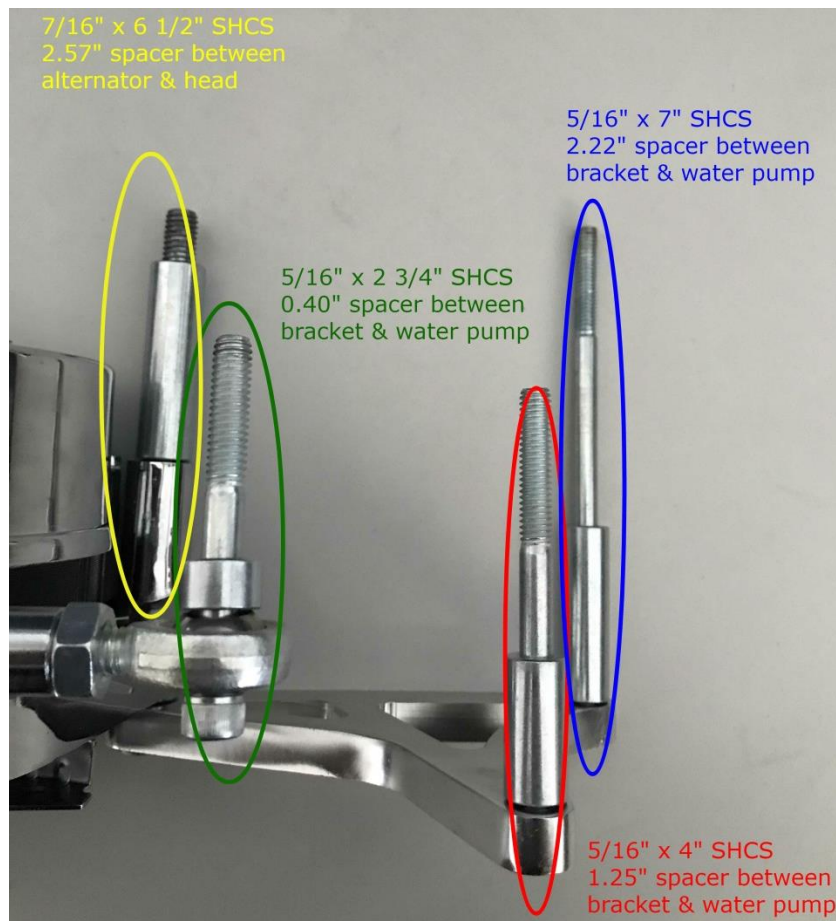


Figure 4: Placement of spacers and SHCS